

**TOYOTA**

**WHITE  
LIGHTNING**

*LAND CRUISER*


owner's information

The Toyota White Lightning Landcruiser station wagon has many additional items fitted as standard equipment, over the normal GX model, to make it an exclusive vehicle. This booklet lists these items and, where necessary, gives instruction regarding their use.

**Additional features:**


- Bucket seats
- Centre console
- One piece front door glass
- Colour keyed crashbar and exterior trim
- Distinctive body graphics
- Headlight protectors
- PIAA 110 watt high performance driving lights
- Wide Pirelli Scorpion tyres on colour keyed rims
- Electric windows
- Electric colour keyed rear vision mirrors
- Cobra remote control alarm with central locking control
- Momo leather steering wheel and gearknob
- Dash mounted identification plaque (consecutively numbered)

## Instrument Panel Overview

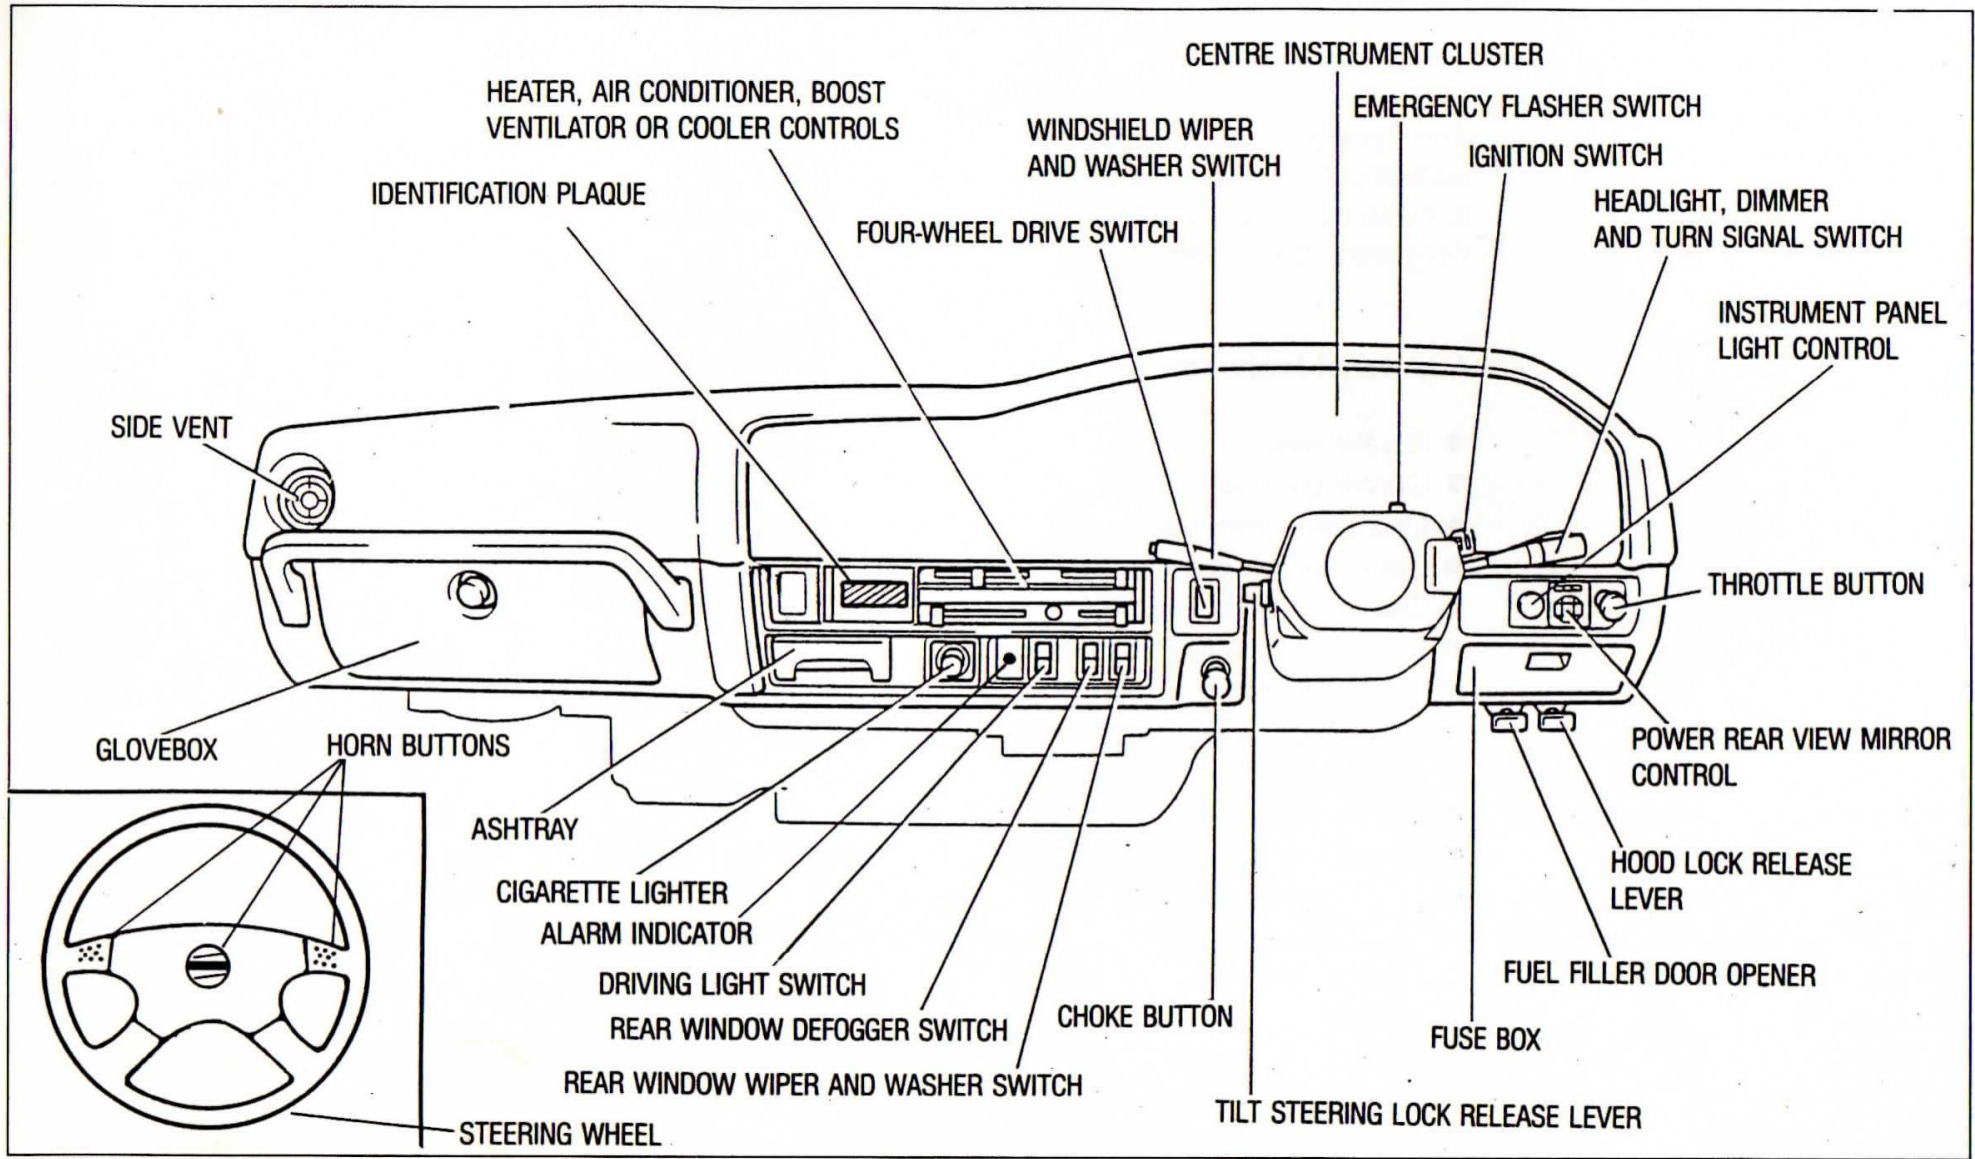



# Engine Compartment Overview

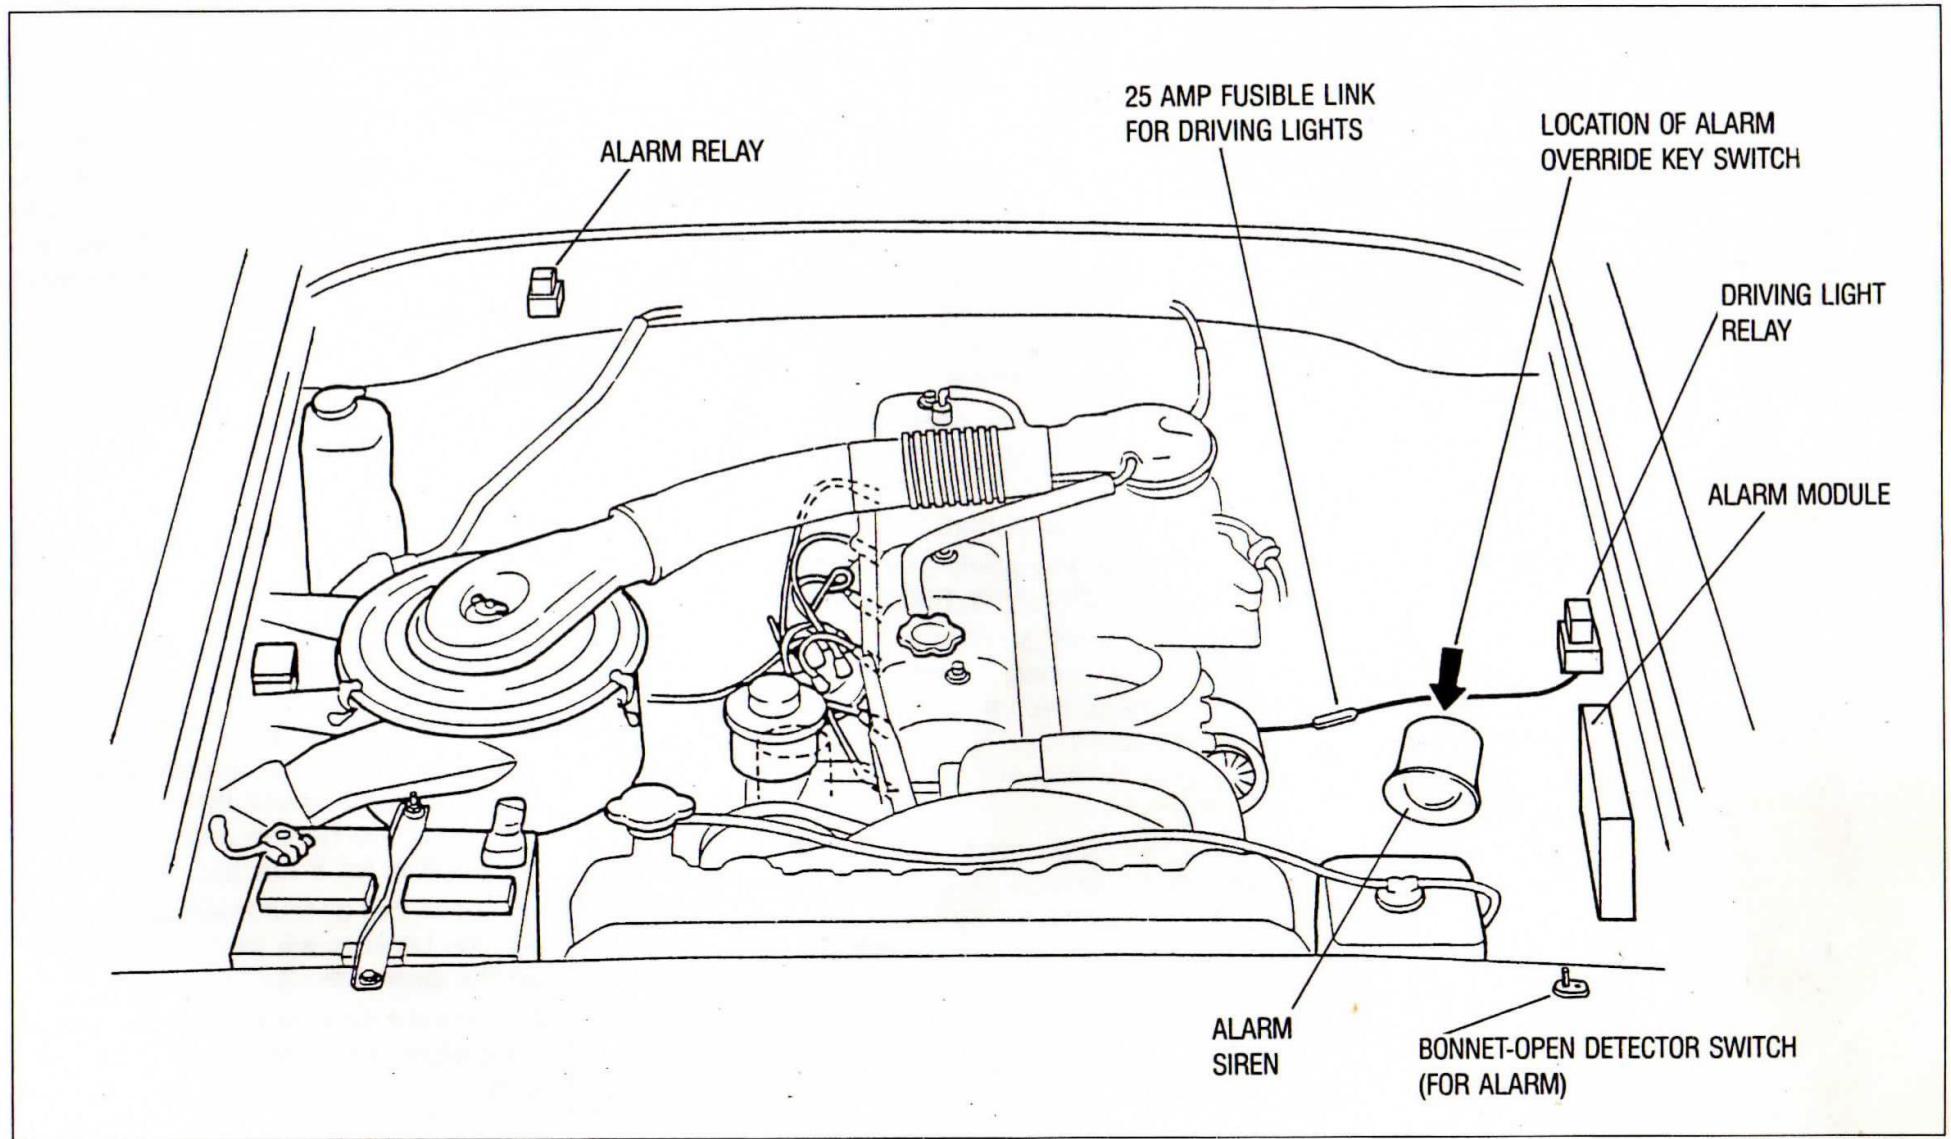

# Instructions for use

## 1) Headlight Protectors

These are removable so you may clean or adjust headlamps or clean the protector itself. To remove, raise the bonnet to expose the headlight protector, lift the retaining tab at the top of the protector and pull the whole cover away from the vehicle. The installation is the reverse of the above process, however, when installing ensure the lower portion of the cover is located first, between the blinker assembly and the headlight surround.

## 2) Driving Lights

The PIAA 110 watt driving lights are operated by a switch on the dash — see instrument panel overview for switch location (page 2). The driving lights will only work when high beam is selected, and the dash switch is in the "on" position.

The left hand driving light is a spread beam type and the right hand driving light a spot beam type. This is to ensure maximum light coverage and penetration.

The fusible link for the driving lights is located in the engine bay — see engine compartment overview (page 3).

It is recommended that driving light bulbs be replaced by your Toyota Dealer as the driving lights may need realignment if disturbed.

## 3) Cobra Security Alarm

The high quality Cobra remote control alarm has the following features:-

- Automatically locks and unlocks all four doors and tailgate when the alarm is switched ON or OFF via the remote control radio key (two radio keys are provided and are powered by replaceable batteries).
- Detects intrusion into all four doors, bonnet and tailgate and sounds alarm.
- Shock sensor detects 'impact' from forced entry, glass breakage etc. and sounds alarm.
- Visual warning — window stickers and flashing dash light (see instrument overview – page 2).
- Immobilises engine when alarm is switched ON. (Petrol engines only)

### Operating Instructions

To turn the alarm ON, simply close all windows and doors, point the radio key in the direction of the bonnet and depress the radio key button for a few seconds.

You will notice that all four doors and tailgate will lock, the blinkers will flash twice and the light on the dash will start blinking.

**NOTE:** There is a delay of approx. 60 seconds before the alarm is fully armed and providing protection.



Should an attempt be made to enter the vehicle via either the doors, bonnet, tailgate or by forced entry, the siren will sound for approx. one minute (unless turned OFF with the radio key). The alarm will then automatically reset to provide ongoing protection.

To turn the alarm OFF, point the radio key in the direction of the bonnet and depress the radio key button for a few seconds. The four doors will unlock, the blinkers will flash once only and the dash light will stop flashing.

### **Other Important Points about your Cobra Alarm**

- You may lock and unlock the vehicle with either the radio key or your ignition/door key. However, only use the radio key when the alarm is switched ON to avoid accidentally setting off the alarm.
- Should an attempt be made to disconnect the alarm from the car's battery, a back-up battery built into the siren will take over and power the siren, ensuring on-going protection.
- The position of the Cobra alarm module, siren and shock sensor is shown on the engine compartment overview.
- The radio key battery has an average life of approx. 6-9 months. Replace with a 12 volt, code GP 23A, available from Cobra or from most tobacconists or jewellers. To replace battery simply prise the two halves of the case apart, remove the existing battery and insert the new one, ensuring that the correct polarity is maintained.
- The normal operating range (distance) of the radio key is approx. 3 metres. This distance will decrease as the battery becomes flat.

- Should you not be able to switch the alarm off due to a flat battery in the radio key, open the bonnet, turn off the back-up battery with the small key at rear of siren and disconnect the positive (+) terminal on the car's battery, wait ten (10) seconds then replace the terminal.
- Use care to avoid water entering any of the alarm components when cleaning the engine compartment.

### **Optional Extras**

The following accessories can be attached to the Cobra alarm and are available through your local Toyota Dealer.

- Ultrasonic scanner
- Pocket pager
- Automatic window closers

## Tyre Placard Information

### TOYOTA LANDCRUISER

|                            |                 |      |                |      |                 |      |
|----------------------------|-----------------|------|----------------|------|-----------------|------|
| RECOMMENDED RIM SIZE       | 7-JJx15         |      | 5.50Fx16       |      | 7-JJx15         |      |
| RECOMMENDED TYRE SIZE      | 10R15-6PRLT     |      | 7.50R16-6PRLT  |      | 255/75R15LT     |      |
| LOAD CAPACITY PER TYRE     | 1000kg @ 345kPa |      | 935kg @ 345kPa |      | 1030kg @ 350kPa |      |
|                            | FRONT           | REAR | FRONT          | REAR | FRONT           | REAR |
| RECOMMENDED TYRE PRESSURES | 210             | 300  | 220            | 340  | 220             | 300  |

WHEN FITTED WITH THESE TYRES THE VEHICLE SHOULD NOT BE  
DRIVEN FOR PROLONGED PERIODS AT HIGH SPEEDS

**NOTE:**

**Winch installation**

The White Lightning Landcruiser crashbar configuration will accept a "lowmount" winch. However, if a "highmount" winch is to be fitted, then larger brackets are required to move the crashbar further away from the chassis. Your Toyota dealer can arrange both supply and fitment of the larger brackets. The bracket kit part number is TCA 810MK.



**TOYOTA**

TOYOTA MOTOR SALES AUSTRALIA LIMITED

SVP016